


# User's Guide

**EXTECH**<sup>®</sup>  
**INSTRUMENTS**  
A FLIR COMPANY

## Non-Contact Phase Rotation Tester

Model PRT200

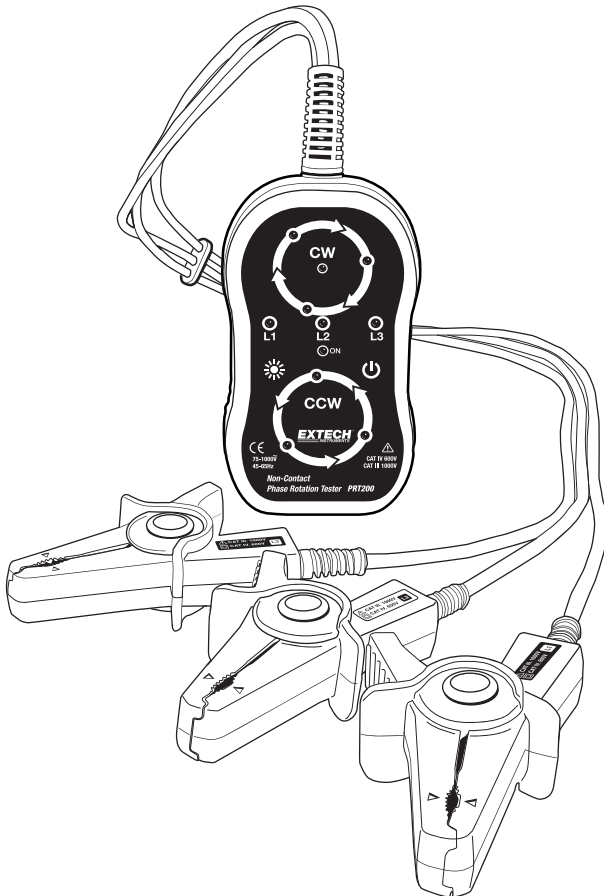

## Introduction

---

Congratulations on your purchase of this Extech Meter. The PRT200 is used to quickly and accurately determine three phase sequence for motor installation and repair. The non-contact voltage detecting technique permits easy connection to insulated conductors, avoiding uncertain and difficult connections to bare high voltage wires. This meter is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.

## Safety

---

### International Safety Symbols



This symbol, adjacent to another symbol or terminal, indicates the user must refer to the manual for further information.



This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present.




Double insulation

### Safety Notes


1. Read the following safety information carefully before attempting to operate the tester.
2. Use the tester only as specified in this manual or the protection provided by the tester may be impaired.
3. This instrument cannot identify a missing earth line.
4. To assure accurate results, do not touch the clips during measurements.
5. Do not pull the cable when removing the measurement clips from the measured conductors. It may damage the test lead.
6. Do not expose the instrument to direct sunlight, high temperature, high humidity or dew.
7. Keep the tester dry! Do not use the instrument when it is wet.
8. Do not mix old batteries with new ones.
9. Never open the battery compartment cover while connected to live conductors.
10. Avoid large shocks or vibrations, they may damage the tester.

# Meter Description

1. Clockwise phase sequence LED
2. Rotation LEDs
3. Live indication LEDs
4. Power on and low battery LED
5. Power switch
6. Brightness switch
7. Counter-Clockwise phase sequence LED
8. Rotation LEDs
9. Buzzer

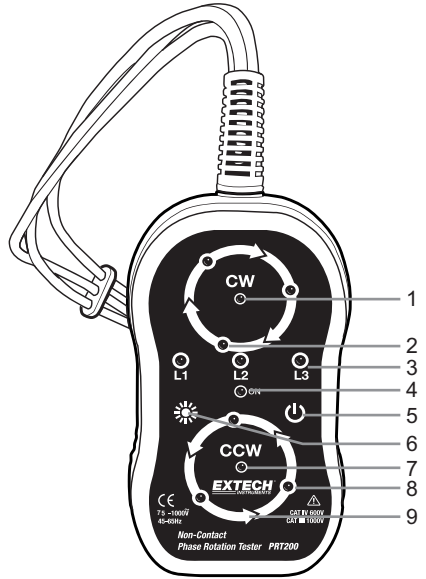


1. Magnets
2. Battery compartment cover
3. Battery compartment screw

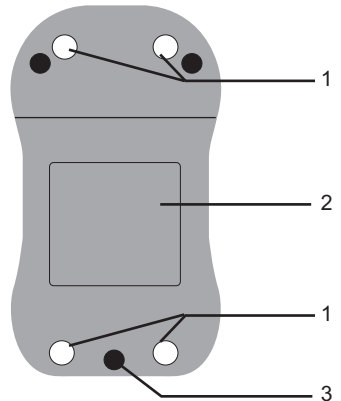

## Operation

Note: Before proceeding, read all safety notes.

1. Press the power switch to turn on the instrument. All of the LEDs will flash for a 2 second test. Only the power LED will remain on after the test. Do not use the instrument if any of the LEDs do not work.
2. Connect the three non-contact alligator clips to the three phase power conductors.  
Red to L1 (R, U)  
White to L2 (S, V)  
Blue to L3 (T, W)
3. The "▼" symbol on each clip should be placed at the center of each conductor.
4. The CW or CCW LED and rotation LEDs will indicate the phase sequence.
5. The buzzer will sound intermittently for a clockwise sequence and continuously for a counter-clockwise sequence..

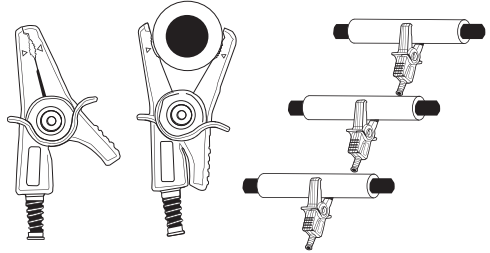

### Status Indications

State	Indication
Three live conductors	L1,L2,L3 LEDs are ON
Open phases	L1, L2 or L3 LED is OFF for open phases
Missing Earth line	LED does not light up for missing earth line
Earth line (Delta connection)	Phase with flashing LED is an earth phase
Positive CW phasing	The CW Rotation LEDs flash in clockwise direction as indicated with "arrow" marks. The buzzer sounds intermittently.
Negative CCW phasing	The CCW Rotation LEDs flash in counter-clockwise direction as indicated with "arrow" marks.. The buzzer sounds continuously.

### Brightness

Press the Brightness button to increase the light intensity of the LEDs. This can be helpful in observing the LEDs in brightly illuminated areas.

### Auto Power Off

In order to extend battery life, the unit will automatically shut off after 5 minutes of inactivity.

### Magnet Mounting

Four magnets are located on the rear panel to enable convenient hands free mounting during use.

## Maintenance

---

### Battery Replacement

When the ON LED begins to flash, the batteries need to be replaced.

1. Remove the clips from any conductors.
2. Remove the screw holding the battery compartment cover and remove the cover.
3. Replace the four AA batteries.
4. Replace the battery cover.

You, as the end user, are legally bound (**Battery ordinance**) to return all used batteries and accumulators; **disposal in the household garbage is prohibited!**



You can hand over your used batteries / accumulators at collection points in your community or wherever batteries / accumulators are sold!

**Disposal:** Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle.

### Cleaning and storage

Periodically wipe the case with a damp cloth. Do not use abrasives or solvents.

A small standby current flows when the meter is off. If the meter is not to be used for a period longer than 60 days, remove the batteries and store them separately.

## Specifications

---

Measurement Principle	Static induction
Input Voltage	75 to 1000VAC
Frequency Range	45 to 65Hz
Max conductor diameter	33mm (1.3")
Probe length	86cm (34")
Auto-Off	5 min. without sequence detection
Low Battery Warning	Power LED flashes
Batteries	4 x 1.5V AA
Current consumption	15mA
Operating Temperature & Humidity	-10 °C to 50 °C (14 °F to 122 °F) Max. 80% R.H.
Storage temperature & Humidity	-20 °C to 60 ° (-4 °F to 140 °F) Max. 80% R.H.
Safety	This meter is intended for origin of installation use and protected, against the users, by double insulation per EN61010-1 to Category IV 600V and Category III 1000V; Pollution Degree 2.
Approvals	CE

**Copyright © 2011 Extech Instruments Corporation (a FLIR company)**

All rights reserved including the right of reproduction in whole or in part in any form.  
[www.extech.com](http://www.extech.com)

## **Warranty (English)**

---

**EXTECH INSTRUMENTS CORPORATION** (A FLIR COMPANY) warrants this instrument to be free of defects in parts and workmanship for **one year** from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department at (781) 890-7440 ext. 210 for authorization or visit our website [www.extech.com](http://www.extech.com) for contact information. A Return Authorization (RA) number must be issued before any product is returned to Extech. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. Extech specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. Extech's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

### **Product Support**

Technical Support: [support@extech.com](mailto:support@extech.com) -- Calibration and Repairs: [repair@extech.com](mailto:repair@extech.com)

#### **Product specifications subject to change without notice**

For the latest version of User Guides, Software updates, and other information:

**[www.extech.com](http://www.extech.com) (781) 890-7440**

Extech Instruments Corporation, 285 Bear Hill Road, Waltham, MA 02451

**ISO9001 Certified**

**Copyright © 2011 Extech Instruments Corporation (a FLIR company)**

All rights reserved including the right of reproduction in whole or in part in any form.

## **Garantía (Español)**

---

**EXTECH INSTRUMENTS CORPORATION (UNA EMPRESA FLIR)** garantiza este instrumento para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada a seis meses para los cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio a Clientes al teléfono (781) 890-7440 ext. 210 para autorización, o visite nuestra página en Internet [www.extech.com](http://www.extech.com) para Información del contacto. Se debe otorgar un número de Autorización de Retorno (RA) antes de regresar cualquier producto a Extech. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. Extech específicamente rechaza cualesquier garantías implícitas o factibilidad de comercialización o aptitud para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de Extech está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

### **Ayuda de producto**

SopORTE Técnico [support@extech.com](mailto:support@extech.com) - Reparación / Retornos: [repair@extech.com](mailto:repair@extech.com)

#### **Las especificaciones del producto están sujetas a cambios sin aviso**

Para la última versión de esta Guía del usuario, actualizaciones de software y otra información

**[www.extech.com](http://www.extech.com) (781) 890-7440**

Extech Instruments Corporation, 285 Bear Hill Road, Waltham, MA 02451

**Certificado ISO9001**

**Copyright © 2011 Extech Instruments Corporation (una empresa FLIR)**

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio.

## **Garantie (Français)**

---

**EXTECH APPAREILS CORPORATION** (Une société FLIR) garantit que cet appareil est exempt de défauts matériels et de fabrication pendant un an à compter de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client au (781) 890-7440 poste. 210 pour autorisation ou visitez notre site Web à l'adresse [www.extech.com](http://www.extech.com) pour obtenir nos coordonnées. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit à Extech. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur tel que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. Extech déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu et ne sera en aucun cas tenu responsable pour tout dommage consécutif direct, indirect, ou accidentel. La responsabilité totale d'Extech est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

### **Appui de produit**

Service d'assistance technique [support@extech.com](mailto:support@extech.com) - Réparations et retours : [repair@extech.com](mailto:repair@extech.com)

#### **Spécifications produit sujettes à modifications sans préavis**

Pour obtenir la dernière version de ce manuel d'utilisation, des mises à jour logicielles et autres informations

[www.extech.com](http://www.extech.com) **-(781) 890-7440**

Extech Appareils Corporation, 285 Bear Hill Road, Waltham, MA 02451

**Certifié ISO 9001**

**Copyright © 2011 Extech Appareils Corporation (une société FLIR).**

**Tous droits réservés, y compris le droit de reproduction, en tout ou en partie, sous quelque forme que ce soit.**